

CA520271

## REPLACING THE FRONT BRAKE PADS


The following procedure applies to both brake calipers.

### TIP

When replacing the brake pads, it is not necessary to disconnect the brake hose or disassemble the brake caliper.

#### 1. Remove:

- Brake pad clips "1"
- Brake pad pin "2"
- Brake pad spring "3"

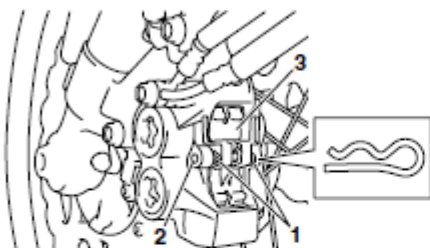

#### 2. Remove:

- Brake pads "1"

4.5 mm (0.18 in)

Limit

0.5 mm (0.02 in)



#### 4. Remove:

- Brake caliper bolts

#### 5. Install:

- Brake pads
- Brake pad spring


### TIP

Always install new brake pads and a new brake pad spring as a set.


- Connect a clear plastic hose "1" tightly to the bleed screw "2". Put the other end of the hose into an open container.
- Loosen the bleed screw and push the brake caliper pistons into the brake caliper with your finger.

4-45

## FRONT BRAKE

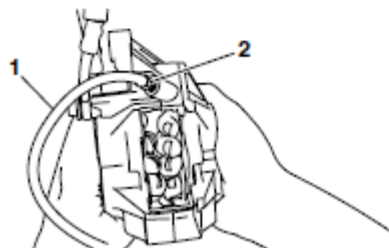

c. Tighten the bleed screw.

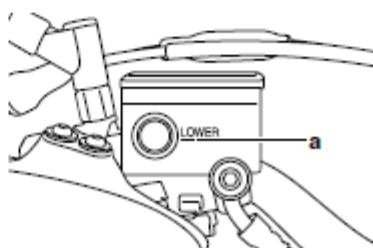

8. Check:

- Brake fluid level